# GB WATE 9575

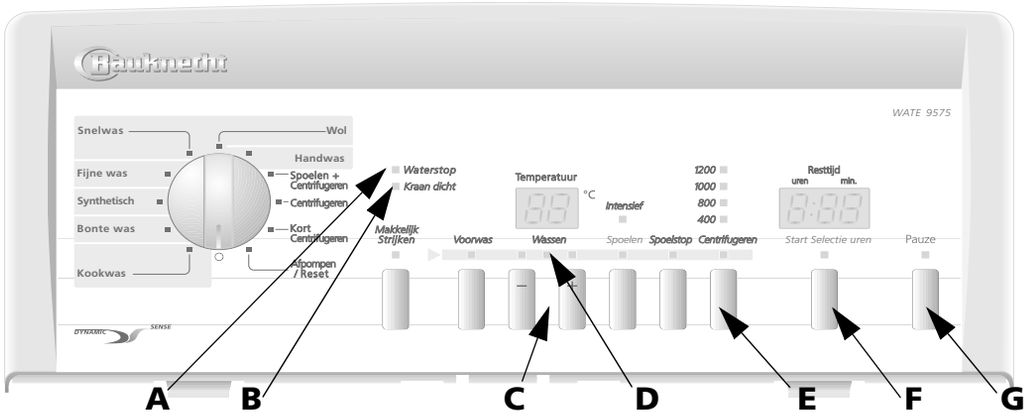


**A.** **"Water Stop" Indication**
**B.** **"Water Tap" Indication**
**C.** **Temperature Selection Buttons**
**D.** **"Programme Sequence" Indicator**
**E.** **"Spin Speed Reduction" Button**
**F.** **"Start Delay" Button**
**G.** **"Start/Pause" Button**

**When you select an option, the corresponding indicator lights up, except if the combination of programme, additional options and temperature is not possible.**

❇ : Option
Yes: dosing required

1) Do not use liquid detergents.
2) For improved garment care spin speed is restricted to 1000 rpm in this programme.
3) For improved garment care spin speed is restricted to 400 rpm in this programme.

| Programme | Care Labels | Type of wash / Notes | Max. load | Detergents and additives | | | Special Options | | | | | | Temperature | Max. Spin Speed |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | | | | Prewash | Main Wash | Softener | Easy Ironing *Makkelijk Strijken* | Pre-wash *Voorwas* | Intensive Rinse *Intensief Spoelen* | Rinse Hold *Spoelstop* | Spin Speed Reduction *Centrifugeren* | Start Delay *Start Selectie Uren* | | |
| | | | kg | I | II | ❀ | | | | | | | °C | rpm |
| **White Cotton** *Kookwas* | 95 | Normally soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen. For heavily soiled laundry the additional "Prewash" option can be selected as well. | 5.0 | ❇ 1) | Yes | ❇ | ❇ | ❇ | ❇ | ❇ | ❇ | ❇ | 20 to 95 | 1200 |
| **Coloured cotton** *Bonte Was* | | Slightly to normally soiled bed linen, table linen and underwear, towels, shirts etc., made of cotton and linen. | 5.0 | ❇ 1) | Yes | ❇ | ❇ | ❇ | ❇ | ❇ | ❇ | ❇ | 20 to 60 | 1200 |
| **Synthetics** *Synthetisch* | | Slightly to normally soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton. | 2.0 | ❇ 1) | Yes | ❇ | ❇ | ❇ | ❇ | ❇ | ❇ 2) | ❇ | 20 to 60 | 1000 2) |
| **Delicates** *Fijne Was* | | Curtains and delicate clothing, dresses, skirts, shirts and blouses. | 1.5 | ❇ 1) | Yes | ❇ | — | ❇ | — | ❇ | ❇ 2) | ❇ | 20 to 40 | 1000 2) |
| **Rapid** *Snelwas* | | Slightly soiled overalls and sportswear made of cotton, polyester, polyamide and blends with cotton. | 3.0 | — | Yes | ❇ | — | — | — | ❇ | ❇ | ❇ | 20 to 60 | 1200 |
| **Wool** *Wol* | | Only woollens with a felt-free finish, labelled with the woolmark and identified as machine washable. If you select "Rinse Hold" do not leave items to soak for too long. | 1.0 | — | Yes | ❇ | — | — | — | ❇ | ❇ 2) | ❇ | 20 to 40 | 1000 2) |
| **Handwash** *Handwas* | | Textiles made of silk, linen, wool and viscose marked as "handwashable". If you select "Rinse Hold" do not leave items to soak for too long. A very gentle spin is used in this programme. | 1.0 | — | Yes | ❇ | — | — | — | ❇ | ❇ 3) | ❇ | 20 to 30 | 400 3) |
| **Rinse + Spin** *Spoelen + centrifugeren* | — | Same as the last rinse and the final spin in the "Coloured Cotton" programme. Programme for treating wash with starch or softener. | 5.0 | — | Yes | ❇ | — | — | ❇ | ❇ | ❇ | ❇ | — | 1200 |
| **Spin** *Centrifugeren* | — | In this programme spinning is intensive. Same as the spin cycle in the "Coloured Cotton" programme. | 5.0 | — | — | — | — | — | — | — | ❇ | ❇ | — | 1200 |
| **Gentle spin** *Kort Centrifugeren* | — | In this programme spinning is gentle. Same as the spin cycle in the "Wool" programme. | 1.5 | — | — | — | — | — | — | — | ❇ 2) | ❇ | — | 1000 2) |
| **Drain** *Afpompen / Reset* | — | Drain only - no spinning. Alternative method of terminating programme after "Rinse Hold". | — | — | — | — | — | — | — | — | — | ❇ | — | — |

**N.B. This machine is controlled by sensors. Please avoid excessive detergent dosing.**

## CONSUMPTION DATA

| Programme | Temperature Selector (°C) | Load (kg) | Water (l) | Energy (kWh) | Approx. Programme Duration (hours : minutes)* |
|---|---|---|---|---|---|
| White Cotton | 95 | 5.0 | 49** | 1.60 | 2:00 |
| Coloured cotton | 60 | 5.0 | 48 | 0.95 | 2:05 |
| Coloured cotton | 40 | 5.0 | 48 | 0.60 | 2:00 |
| Synthetics | 60 | 2.0 | 54 | 0.70 | 1:30 |
| Synthetics | 40 | 2.0 | 50 | 0.50 | 1:15 |
| Rapid | 30 | 3.0 | 35 | 0.40 | 0:30 |
| Delicates | 40 | 1.5 | 50 | 0.50 | 0:45 |
| Wool | 40 | 1.0 | 50 | 0.50 | 0:45 |
| Handwash | 30 | 1.0 | 35 | 0.40 | 0:35 |

Prewash cycle increases programme duration approximately 15 min. Consumption values were measured in normalized conditions in compliance with standard IEC 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash.
**The data on the "Energy Label" refer to the programme "Coloured Cotton 60° C".**
* The remaining time indicator can similarly deviate from the values in the table, because it takes into account the household conditions applicable at that time.
** To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

## PREPARATION OF WASH CYCLE

1. Close the drum flaps and check that they are properly locked.
2. Add detergents and additives into the dispenser to no more than the **"MAX"** level mark, as follows:
   - Programme with pre and main wash I II
   - Main wash programme without prewash II
   - Fabric softeners and conditioners ❀
   - Stain remover agents II
   - Anti-scale agents (if necessary) II
3. Turn the **programme selector knob** to the desired programme.
   The remaining time display shows the duration of the chosen programme (in hours and minutes) and the indicator light of the **"Start/Pause"** button flashes.
   The programme sequence and the predefined spin speed indication corresponding to the selected programme lights up.

The preselected temperature can be altered by pressing the "+" or "-" button.

## SELECT THE DESIRED OPTION

**When you select an option authorized by the programme, the corresponding indicator lights up, except if the combination of programme, additional options and temperature is not possible.**

**"Easy Ironing" button**
- Can be used together with "Cotton", "Coloured cotton" and "Synthetics" programmes to make ironing easier.
- Increases the water quantity in rinsing and the clothes are spun in a softer manner.

**"Prewash" button**
- Only for heavily soiled loads (for example sand, granular dirt).

**"Intensive Rinse" button**
- The amount of water is increased to ensure a more intensive rinse.
- This option is particularly suitable for areas with very soft water, washing baby linen and people with skin allergies.

**"Rinse Hold" button**
- The laundry remains in the last rinse water without progressing to the final spin cycle to avoid creasing and prevent colours from fading.
- This option is particularly recommended for the "Synthetics" or "Delicates" programmes.
- This function is particularly useful if you want to postpone spinning to a later time, or if you want to drain only.

**Note:** The programme stops to "Rinse Hold" when the "Rinse Hold" light indicator programme is on during the cycle.

**Appliance in "Rinse Hold":**
- Press the "Rinse Hold" button again: the programme will terminate automatically with the selected spin cycle.
- If you do not wish to spin the clothes, turn the programme selector knob to the "Drain" programme and press the "**Start/Pause**" button again.

**"Spin Speed Reduction" button**
- Every programme has an automatically allocated maximum spin speed.
- Press the button to set another spin speed.
- If you want to cancel the final spin, select the rinse hold option and drain the water after the cycle has finished (see **Appliance in "Rinse Hold"**).

## START DELAY

The "Start Delay" button allows the user to run the machine at his convenience, for example at night when electricity is cheaper.
- Select programme, temperature and options.
- Press the "Start Delay" button several times to select the delay time by 1 to 19 hours;
- Press the "**Start/Pause**" button. The indicator light of the **"Start/Pause"** button lights up and the lamp of the "Start Delay" button flashes.
- The time delay indication disappears when the programme starts and is replaced by the remaining time.
- The number of hours preselected can be reduced later by pressing the "Start Delay" button again.

**To cancel the "Start Delay" option**
- Turn the programme selector to the "◯" position.
- Reselect the desired programme and options and press the "**Start/Pause**" button.

## PROGRAMME START

Turn on the tap and press the "**Start/Pause**" button. The indicator light of the "**Start/Pause**" button lights up. The indicator lamp shows the sequence reached by the programme. After starting the programme, the programme sequence indicator signals the Wash, Rinse and Spin phases.
**Note**: If there is a power interruption or if the appliance is disconnected during the cycle, the programme will run again from the point where it was interrupted.

## DOOR LOCK

For safety reasons, the door is locked during certain phases of the cycle. At the end of the cycle or during an interruption, the door unlocks automatically after about 1 minute.

## END OF WASH CYCLE

- The remaining time is on "0:00" and all the lights of the programme sequence indication are off.

1. Turn the programme selector to the "◯" position.
2. Turn the tap off.
3. Open the door and the drum flaps and unload the machine.

## CHANGE THE PROGRAMME OR OPTIONS DURING THE CYCLE

1. Select the new programme using the programme selector. If necessary, select the additional options and the spin speed. The luminous indicator of the **"Start/Pause"** button flashes.
   **Note:** the "Start Delay" and "Prewash" options cannot be selected after a programme change.
2. Press the **"Start/Pause"** button. The new programme selected continues at the same position where the previous programme was interrupted.
   **Note:** Do not add detergent for this programme.

## PAUSE/INTERRUPT A PROGRAMME

If, for any reason, you wish to interrupt the programme for a certain time and continue it later:

1. Press the **"Start/Pause"** button. The light flashes.
2. After the desired pause, press again on the **"Start/Pause"** button.

## CANCEL PROGRAMME

1. Set the programme selector to "Drain".
2. Press the **"Start/Pause"** button to start the "Drain" programme.